



CLP Pipemarkers

How to guide

Pipemarker app

Brady's "Pipemarker (CLP)" app enables users to design a CLP Pipemarker in just 2 screens!

Download

The "Pipemarker (CLP)" app can be downloaded from the [Brady App Store](#) in Brady Workstation.

Download and install the Brady Workstation application platform on your computer to browse through the various professional sign & label creation apps in the Brady App Store.


A pipemarker in 2 screens

Open the "Pipemarker (CLP)" app in Brady Workstation.



Screen A:

1. Select your printer
2. Select your Standard to use
3. Select your Marker size by pipe size or tape width

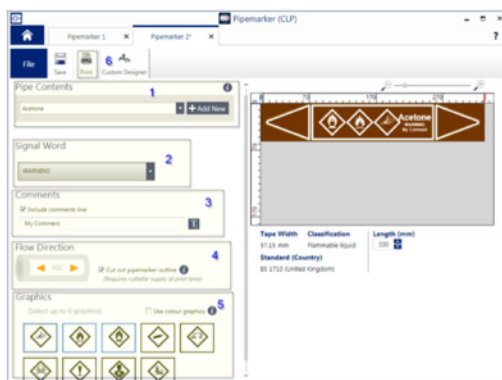

Screen B:

1. Select a Pipe Contents. This will determine the thermal transfer tape and ribbon colours you will need. If the pipe contents you need is not available in the app, you can add it by pressing Add new
2. Select the desired Signal Word
3. Add your comments if required
4. Select the flow direction and whether to cut the arrow ends
5. Set the graphics
6. Press print

System requirements

1 GHz or faster 32-bit (x86) or 64-bit (x64) processor, 1 GB RAM minimum memory (2GB recommended), Windows 7, 8, or 8.1, disk space of 250 MB minimum plus 15 MB for each installed app.

Brady EMEA Locations

Africa	+27 11 704 3295	Middle East	+971 4881 2524
Benelux	+32 (0) 52 45 78 11	Norway	+47 70 13 40 00
Central & Eastern Europe	+421 2 3300 4800	Romania	+40 21 202 3032
Denmark	+45 66 14 44 00	Russia	+7 495 504 04 99
France	+33 (0) 3 20 76 94 48	Spain & Portugal	+34 900 902 993
Germany	+49 (0) 6103 7598 660	Sweden	+46 (0) 8 590 057 30
Hungary	+36 23 500 275	Turkey	+90 212 264 02 20
Italy	+39 02 26 00 00 22	UK & Ireland	+44 (0) 1295 228 288